


## TOOLS & HARDWARE USED:

Unit Type	Description
C6P99DG	Bostitch 2" x .099" Coil Framing Nail
SB-CAPS	Bostitch 1" Caps
N66BC	Bostitch Cap Nailer



# INSTALLATION INSTRUCTIONS:

Use 100-110 psi on nail gun.

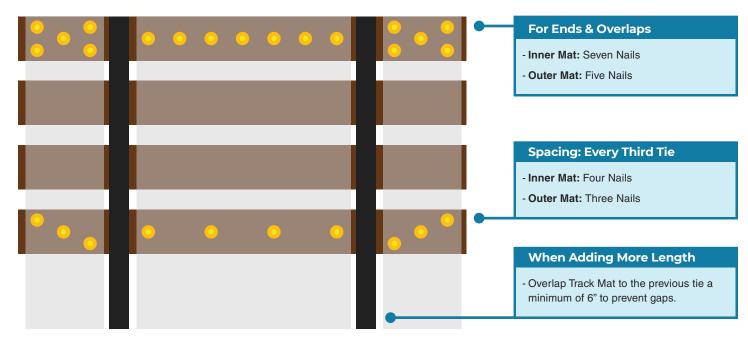



814-822-2004

## BALLAST:

- Make sure ballast is level with top of ties.
- If ballast is below the top of the tie, then install extra nails around that area.

#### **CUSTOMER SUPPORT:**

- For installation questions, email jbeaver@halenhardy.com or call 814-931-3030.

## **ROTTING TIES:**

- Try to avoid nailing into rotting ties. If tie is rotting or in bad shape, go to tie before and after the rotting tie.
- If you have an entire section of rotting ties, then you may need extra nails. In addition, try to find the best ties to nail to.

## STORAGE:

- Store in a cool and dry place prior to install.

